



Quick Start Guide

Skype USB Handset
with LCD

FR-33.2



www.ipevo.com


Table of Contents

1 Introduction	3
1.1 IPEVO FR-33.2 Skype USB Handset LCD Overview	3
1.2 IPEVO FR-33.2 Handset Buttons	4
2 Talking with Skype	5
2.1 Getting Set Up	5
2.2 IPEVO FR-33.2 Handset Shortcuts to Skype	7
2.3 Recording a Skype Conversation	8
3 New to Skype?	9
3.1 The Basic Idea	9
3.2 Making Skype-to-Skype Calls	10
3.3 Making SkypeOut Calls	10
4 Advanced Display Screen Options	11
4.1 Calling a Recently Dialed Contact	11
4.2 Searching through Contacts	11
4.3 Customizing your IPEVO FR-33.2 Ringtone	12
4.4 Setting and Using the Speed Dial Function	13
5 Tips, Tutorials, FAQs, Customer Service	15
5.1 Tips, Tutorials, and FAQs	15
5.3 Questions? Talk to Customer Service	15
6 Warranty Information	16
6.1 Warranty Coverage Information	16
6.2 What the Warranty Does Not Cover	16
6.3 Limitation of Implied Warranties	17
6.4 Return and Exchange Policy and Procedure	18
7 Product Specifications & System Requirements	19
7.1 Package Contents	19
7.2 Specifications	19
7.3 System Requirements	19

1 Introduction

Congratulations on purchasing your IPEVO FR-33.2 handset. Your IPEVO FR-33.2 handset enables you to make free phone calls to other Skype users, as well as affordable phone calls to landlines. The IPEVO FR-33.2 handset delivers wideband signal for optimal voice quality and advanced noise cancellation for crystal clear conversation.

1.1 IPEVO FR-33.2 Skype USB Handset with LCD Overview

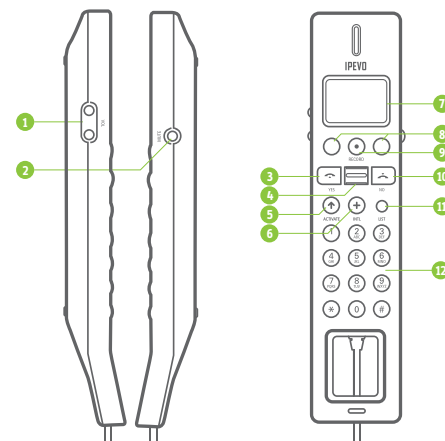

1. Volume Control Pad
2. Mute button
3. Answer/Call button
4. Contact Scroll-thru button
5. Skype Activation Key
6. "+" Key
7. Display Screen
8. Function Keys
9. Record button
10. End Call/ Cancel button
11. List Key
12. Number Pad

1.2 IPEVO FR-33.2 Handset Buttons

1. Volume Control Pad

Press the upper soft-key to increase the volume; press the lower soft-key to reduce the volume.

2. Mute button

Press this button once to mute. Press the Mute button again to continue your conversation.

3. Answer/Call button

When receiving an incoming call, press this button to accept calls; or after selecting the caller from your Skype list, press this button to call the selected contact.

4. Contact Scroll-thru button

Toggle the button up or down to scroll through your Skype contact list.

5. Skype Activation Key

When Skype is minimized, press and hold this button to launch Skype.

6. “+” Key

Press the “+” key to make a SkypeOut call* (calling traditional landlines and cell-phones from your FR-33.2 handset through Skype).

*Requires Skype phone credits

7. Display Screen

Use this screen to navigate through Skype options, such as searching through contact lists, dialing recent contacts or setting your ring tone.

8. Function Keys

Use these buttons to navigate through the Display Screen’s options.

9. Record button

Press this button to record your Skype conversation using the included freeRec software. Press this button during a recording to pause the recording, and once more to resume the recording.

10. End Call/Cancel button

Press this button to hang up or cancel the selection in the Skype menu

11. List Key

Press this button to view your contact list; press multiple times to scroll through contact groups.

12. Number Pad

Press numbers to make SkypeOut calls (requires Skype credits) or to search through contact lists alphabetically.

2 Talking with Skype

2.1 Getting Set Up

To benefit from the IPEVO FR-33.2 handset’s shortcut buttons for Skype, you will need to install the IPEVO Control Center. Here’s how:

1. Install the driver


Insert the installation CD or download the latest IPEVO driver from www.ipevo.com/support/ to ensure that your driver works in sync with your computer’s latest operating system update.

The IPEVO FR-33.2 handset installation program will launch automatically. Simply follow the prompts to complete the installation process.

Note: If the installation does not start automatically, start the program manually by launching the installation file from your CD-ROM drive or download site.

2. Connect the IPEVO FR-33.2 Handset

If the IPEVO FR-33.2 handset is not already connected to your computer, a screen will prompt you to do so as part of the installation process. In certain cases, the following screen may appear:

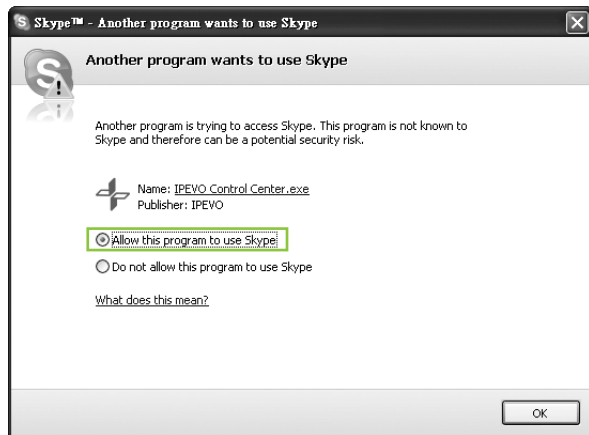

When Skype prompts you that another program wants to access Skype. **Select Allow this program to use Skype** and Click **OK**.

3. You're done!

A screen prompt will appear to notify you once installation is complete and the IPEVO Control Center icon shortcut will appear on your desktop. The IPEVO Control Center allows you to conveniently access and customize preferences for your IPEVO FR-33.2 handset.

TIP: For advanced settings and tips, watch our tutorial videos at www.ipevo.com

The IPEVO Control Center for Skype will automatically run. Restarting your computer after installation is recommended to ensure all the functions are working.

You're ready to start chatting!

2.2 IPEVO FR-33.2 Handset Shortcuts to Skype

Sign in to your Skype account. If you do not have one, create one at www.skype.com. The IPEVO FR-33.2 handset offers the following one-touch shortcuts to Skype functions when the IPEVO Control Center is running:

1. Activating Skype

Did you minimize Skype? Click on the Skype Activation key to launch Skype on your desktop.

2. Accepting or declining an incoming call

When you receive an incoming call, press the Answer/Call button to accept, or the End Call/Cancel button to decline.

3. Calling a Skype contact

Toggle the Contact Scroll-Thru button to scroll through your contact list. Your Skype

contacts will be displayed on the Display Screen. When the desired contact is selected, press the Answer/Call button to call your contact.

TIP: you can use the Number Pad to locate contacts alphabetically

4. Calling a landline or cell phone (placing a SkypeOut call)

If you have Skype credits, you can place SkypeOut calls. Press the “+” key before dialing the number you are trying to reach. Then use the Number Pad to dial the number. Finally, press the Answer/Call button to place the call.

For example, dial “+” 1 408 324 0158 to reach the IPEVO customer service hotline in San Jose, CA.

5. Hanging up

At the end of a Skype conversation, press the End Call/Cancel button to hang up.

6. Muting a conversation

Press the Mute button to mute a Skype conversation. Press it again to unmute.

2.3 Recording a Skype Conversation

The included freeRec software enables you to record conversations made with Skype at the touch of a button. FreeRec also allows you to record your voice directly from your IPEVO FR-33.2 handset for audio note taking, speaking text for powerpoints, or voice over for movies made with other software. To record a conversation in Skype, you must be running the IPEVO Control Center.

1. Starting a recording

Launch freeREC by pressing the Record button.

2. Pausing and resuming a recording

Press the Record button during a recording to pause it. Press it once more to resume.

3. Ending a recording

Press the End Recording button during a recording to end it.

TIP: freeRec options let you change the recording quality, file name and destination folder. For more tips and tutorials, visit www.ipevo.com

3 New to Skype?

3.1 The Basic Idea

With the IPEVO FR-33.2 handset, you can chat with your contacts using Skype-to-Skype or using SkypeOut to call landlines and cell phones. Skype-to-Skype calls require both users to have the free Skype software running on their computer. Skype-to-Skype calls can be voice calls or videochatting.

SkypeOut enables users to call landlines and cellphones across the world. These calls can be made by purchasing credits. Once you’ve set up your account with Skype, you can log on to any computer in the world that has internet access, and use your credits! To check on rates and availability, visit www.skype.com

Did you know? You can use the IPEVO Point of View webcam to enhance your Skype experience. Buy it today at www.ipevo.com

3.2 Making Skype-to-Skype Calls

Making Skype-to-Skype calls to contact your friends, family or business contacts is easy. Here's how:

Step 1. Press the Skype Activation key to launch Skype.

Step 2. Toggle the Contact Scroll-thru button to select the person you want to call in your contact list.

Step 3. Press the Answer/Call button.
Start your conversation!

3.3 Making SkypeOut Calls

SkypeOut calls are phone calls placed from Skype to landlines and cell phones. They require purchasing Skype credits. Please visit www.skype.com for more detailed information.

Step 1. Press the “+” key before dialing the number you are trying to reach.
For example, dial “+” 1 408 324 0158 to reach the IPEVO customer service hotline in San Jose, CA.

Step 2. Press the Answer/Call button to call.
Start talking!

Want more information? Check out www.ipevo.com for tips and tutorials.

4 Advanced Display Screen Options

The IPEVO FR-33.2 handset Display Screen gives you access to advanced Skype options. This section will show you advanced customization tips and shortcuts available on your IPEVO FR-33.2 handset.

4.1 Calling a Recently Dialed Contact

Your IPEVO FR-33.2 handset takes the hassle out of dialing numbers on your keyboard. Thanks to the Display Screen options, you can easily redial any of your 15 most recently dialed contacts and numbers. Here's how:

Step 1. When on the main Display Screen, select Dialed using the Function Keys.

Step 2. Toggle the Contact Scroll-Thru button to browse through your contact list. Your Skype contacts will be displayed on the Display Screen.

Step 3. When the desired contact is selected, press the Answer/Call button to call your contact. Start talking!

4.2 Searching through Contacts

With your IPEVO FR-33.2 handset, you can select any contact from your list without touching your computer. There are 2 options:

1. Accessing all contacts

You can access all your contacts by toggling the Contact Scroll-thru button when the Display Screen is in the main menu.

2. Accessing contacts in a group


If you have created groups in your Skype contacts, use the List key to quickly access the contacts in your groups. Press the List key multiple times to view the groups

you have created. Once you can see the desired Group listed in the Display Screen, toggle the Contact Scroll-thru button to scroll through the list of names and select the person you wish to call.

Once you have selected the desired contact, press the Answer/Call button. You're done! Start talking!

4.3 Customizing your IPEVO FR-33.2 Ringtone

You can select from 10 ringtones or set the ringtone to silent.

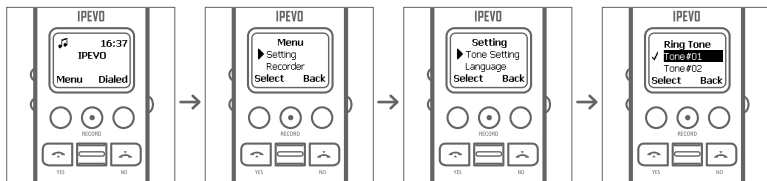

Step 1. When on the main Display Screen, select Menu

Step 2. Toggle the Scroll-thru button to Setting

Step 3. Select Tone Setting

Step 4. Under the Ring Tone menu, you will be able to toggle the Scroll-thru button to preview from 10 ringtones or silence, and select the ringtone of your choice!

4.4 Setting and Using the Speed Dial Function

With your IPEVO FR-33.2 handset, you can call your contacts using the speed dial. Here's how:

Step 1. Setting a speed dial number in Skype

In your Skype Contacts tab, right-click on the contact you wish to edit. Select the "Set Speed-dial" option¹ from the drop-down menu as shown below. Choose the speed dialing number² you wish to assign (between 1 and 99).



Done! The speed dialing number assigned to the selected contact will appear by the selected contact name in your contact list³.



Step 2. Calling a speed dial contact

Dial the speed dial number of the contact you wish to call, then press the Answer/Call button. That's it! Start talking!

5 Tips, Tutorials, FAQs, Customer Service

5.1 Tips, Tutorials, and FAQs

For the latest tips, tutorials and Frequently Asked Questions on how to use your IPEVO FR-33.2 handset, visit www.ipevo.com

5.2 Questions? Talk to Customer Service

Our Customer Service center is located at the heart of San Jose, CA.

We try to constantly update our FAQ library in www.ipevo.com, so we recommend you start there. However, if you have any answered questions, feel free to email us at cs@ipevo.com, or call us at 1 877 269 4738 Mon-Fri, 10:00am-5:00pm PST.

6 Warranty Information

6.1 Warranty Coverage information

IPEVO products come with a one year parts and labor limited warranty from the date of purchase as described below. Note that shipping and handling fees are not covered by this warranty.

This warranty is valid only for the first consumer purchaser. IPEVO warrants its products to be free from defects in material and workmanship during the warranty period. If a product proves to be defective in material or workmanship during the warranty period, IPEVO will, at its sole option, repair or replace the product with a similar product. Replacement Product or parts may include remanufactured or refurbished parts or components. The replacement unit will be covered by the balance of the time remaining on the customer's original limited warranty. IPEVO provides no warranty for the third-party software included with the product or installed by the customer.

6.2 What the warranty does not cover

IPEVO retains the right to refuse warranty repair or exchange for reasons such as but not limited to those listed below:

Any product on which the serial number has been defaced, modified or removed. Damage, deterioration or malfunction resulting from:

- Misuse, neglect, fire, water, lightning, or other acts of nature
- Unauthorized product modification, or failure to follow instructions supplied with the product, including use of the product with non authorized programs.

- Attempted repair by anyone not authorized by IPEVO.
- Damage to or loss of any programs, data or removable storage media.
- Software or data loss occurring during repair or replacement.
- Any damage of the product due to shipment.
- Removal or installation of the product.
- Causes external to the product, such as electric power fluctuations or failure.
- Use of supplies or parts not meeting IPEVO's specifications.
- Normal wear and tear.
- Any other cause which does not relate to a product defect (unclear voice quality due to network and not hardware).

6.3 Limitation of Implied Warranties

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, WHICH EXTEND BEYOND THE DESCRIPTION CONTAINED HEREIN INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

EXCLUSION OF DAMAGES

IPEVO'S LIABILITY IS LIMITED TO THE COST OF REPAIR OR REPLACEMENT OF THE PRODUCT. IPEVO SHALL NOT BE LIABLE FOR:

DAMAGE TO OTHER PROPERTY CAUSED BY ANY DEFECTS IN THE PRODUCT, DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE OF THE PRODUCT, LOSS OF TIME, LOSS OF PROFITS, LOSS OF BUSINESS OPPORTUNITY, LOSS OF GOODWILL, INTERFERENCE WITH BUSINESS RELATIONSHIPS, OR OTHER COMMERCIAL LOSS, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. ANY OTHER DAMAGES, WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE. ANY CLAIM AGAINST THE CUSTOMER BY ANY OTHER PARTY.

EFFECT OF LOCAL LAW:

This warranty gives you specific legal rights, and you may also have other rights

which vary from locality to locality. Some localities do not allow limitations on implied warranties and/or do not allow the exclusion of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

6.4 Return and Exchange Policy and Procedure

Within one year of the purchase date, IPEVO will repair the defective unit, or if the unit is not repairable, issue a working replacement for free. You may also return the product within the terms of the above described warranty. Note that shipping and handling fees are not covered by this offer.

In order to obtain warranty service:

Step. 1

Contact IPEVO Customer Support at 1 877 269 4738 or email us at cs@IPEVO.com for a Return Material Authorization number (RMA). You will be required to provide:

1. A copy of the dated sales slip or transaction ID# from our online store.
2. Your name.
3. Your ship to address, email address and phone number.
4. The serial number of the product.
5. A description of the problem.

Step 2.

Bring or ship the product prepaid in the original container, with the associated accessories, to IPEVO at 2860 Zanker Rd Suite 104, Attn: Return and Exchange Department, San Jose, CA 95134. Insurance of the returning product is recommended should you experience any transportation claim from the carrier you select.

7 Product Specifications & System Requirements

7.1 Package Contents

- IPEVO FR-33.2 handset
- IPEVO FR33.2 cradle
- IPEVO Control Center driver CD
- Quick start guide

7.2 Specifications

- Supports Skype
- USB 1.1 or 2.0
- LED blink indicator
- 10 ring tones
- 151X38X25 mm / 5.94x1.49x0.98 inches (LxWxH)
- 65g / 2.29 ounces

7.3 System Requirements

- Window XP or Vista, Mac OSX 10.4 OR UP
- 400MHz CPU or up, 128 MB RAM or up, 50MB free hard-disk space
- Broadband internet connection
- Available USB port on your computer
- CD-ROM DRIVE

Further questions? Comments? Contact IPEVO at Tel 1 877 269 4738 or email us at cs@ipevo.com

Copyright © IPEVO Inc, 2008. All rights reserved.

<http://www.ipevo.com>



USA, CANADA

IPEVO Inc.

2860 Zanker Road, Suite 104,

San Jose, CA 95134, USA

Tel: 1-877-269-4738

Service mail: cs@ipevo.com

<http://www.ipevo.com>

INTERNATIONAL

IPEVO corp

3F, No.53, Bo-ai Rd.,

Taipei 100, Taiwan

Tel: +886-2-5550-8686

Service mail: service@ipevo.com

<http://www.ipevo.com.tw>